



AN003

Protection for OEM data communications, signal and telephone systems

Application Note AN003 for ESP PCB/06D, ESP PCB/15D, ESP PCB/30D,
ESP PCB/50D, ESP PCB/TN, ESP PCB/06E, ESP PCB/15E, ESP PCB/30E, ESP PCB/50E



Protection for OEM data communications, signal and telephone systems

Circuit board layout and design

All Furse PCB protection products are capable of handling 10 kA of surge current.

The ESP PCB/** Series are electrically the same as the (wire-in) Furse ESP D, SL, E and TN Series protectors (e.g. ESP 06D, ESP SL06, ESP 15E, ESP TN).

All these units offer a high level of protection, however with the PCB mount versions the track layout or choice of connectors may restrict the unit's performance as the line and earth tracks need to be able to handle 10 kA.

If the track fails before 10 kA, the surge protection offered will be limited to what the track can handle before breakdown.

Some guidelines for suitable track layouts are outlined opposite.

The track width connected to the output pins does not affect the surge current capabilities, however care must be taken to ensure the transient is not picked up on the output tracks.

The dirty ('line') tracks should be routed parallel and as close together as possible. This should also be implemented on the clean tracks, however clean (outgoing) tracks should never be routed close and parallel to line (incoming) tracks or dirty barrier earth connections as the transient can be re-introduced after the protector due to electromagnetic coupling (Figures C and D opposite).


If it is unavoidable the clean tracks can cross the line tracks at 90°.


The use of an earth layer or plane is highly recommended as this reduces the electromagnetic field produced by a transient discharging to earth considerably, and hence the chance of the transient being picked up on the clean tracks.

If multiple lightning barriers are used on a PCB, dirty line and clean lines should be kept at least 20 mm apart (Figure B).

This separation distance must still be implemented on multi-layer PCBs, as the interference will easily pass through the board. If the PCB layout requirements cannot be met, the wire-in Furse D, SL, E and TN series equivalents can be used.

For further queries regarding suitable track layouts, please contact Furse.

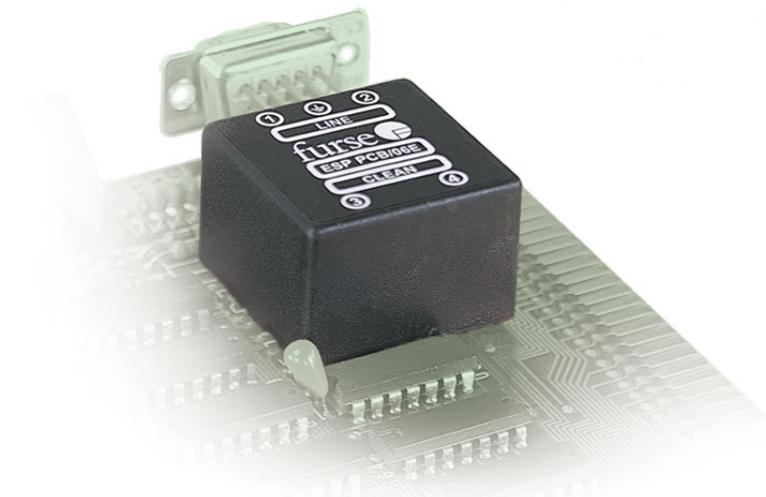

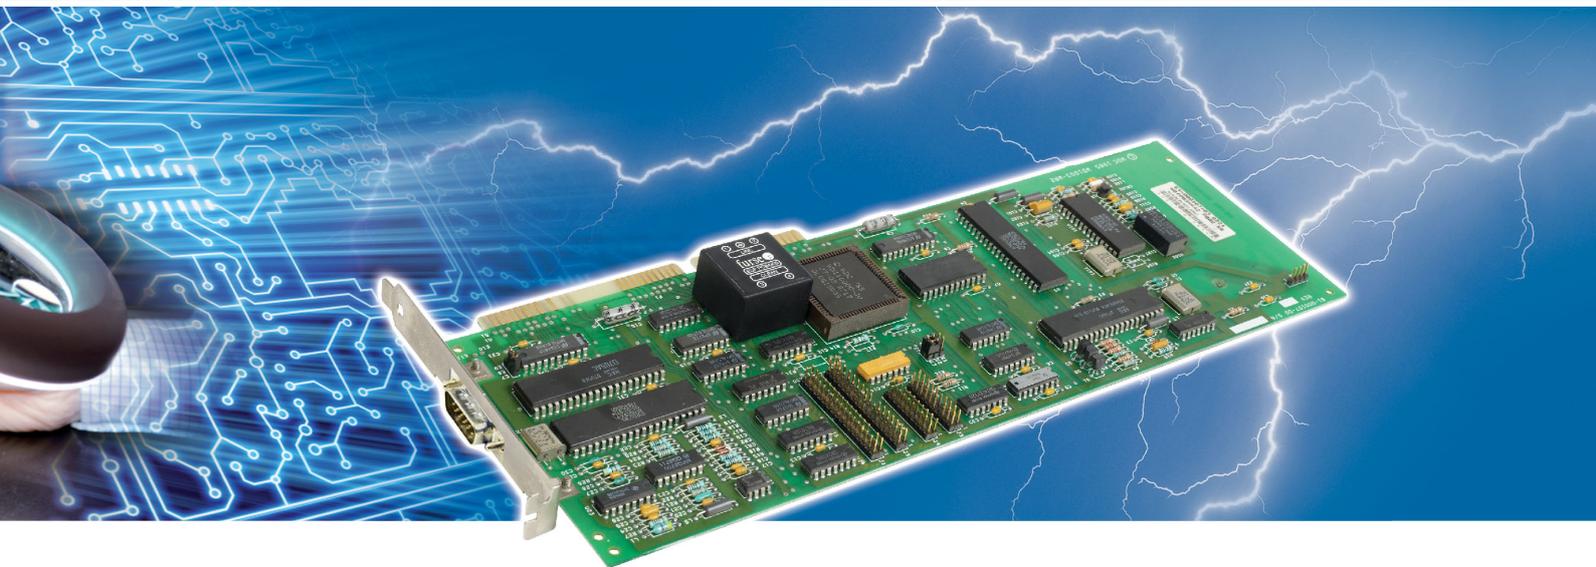

Good layout and design

Do

- Keep the input 'line' tracks as close together as possible
- Keep the output 'clean' tracks as close together as possible
- Use the largest track width the board can accommodate for the 'line' inputs
- Balance out the large track width with good track separation to ensure adequate creepage and clearance
- Use both top and bottom copper layers on the PCB (if possible)
- Use the largest pad size possible, as small solder joints can break down with a transient overvoltage
- Position the unit as close to the line input of the PCB as possible, minimising the track distance
- Use a high PCB copper plating level, as thicker plating will considerably increase the current handling
- Connect the earth to the main star point of the earthing system, routing away from all other connections
- Use an earth layer/plane (if possible), as this will greatly minimise inductance and electromagnetic coupling

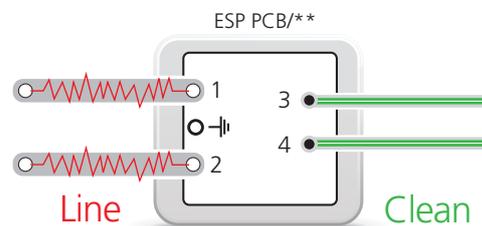


Figure A: Maximum line to clean separation. Large input tracks and pads (using top and bottom copper layers). Earth pin is bonded to an earth layer/plane.

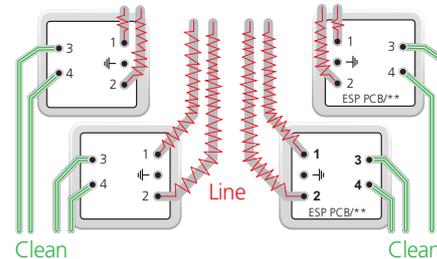


Figure B: All dirty ('line') incoming tracks are separated from the clean output tracks, individual line and clean tracks are routed close together. Earth pins are bonded to an earth layer/plane.

Bad layout and design

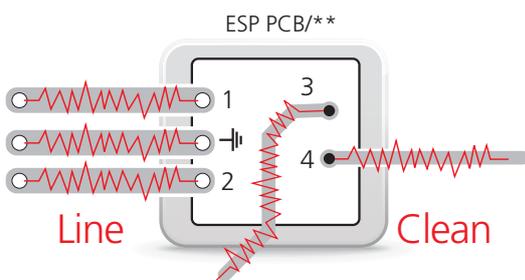


Figure C: Output tracks will create a large induction loop and are too close to input tracks. Input pads could be made larger. Transient will be re-introduced after protector.

Don't

- Route the line inputs (including earth) close to the clean outputs
- Create large loops with the line or clean tracks as this will increase electromagnetic coupling

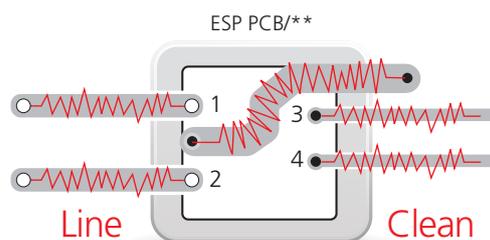


Figure D: Earth track too close and parallel to output tracks. Input pads could be made larger. Transient will be re-introduced after protector.

Full specifications of all of the products in the Furse ESP range of transient overvoltage protectors can be found in the Total Solution Product Catalogue.



To request a copy, contact Furse Sales at the address opposite.

Full product data can be downloaded in PDF form from our website at www.furse.com. Copies of the Total Solution Product Catalogue can also be requested from our website.

UK OFFICE

Thomas & Betts Limited
Furse
Wilford Road
Nottingham
NG2 1EB
United Kingdom

Switchboard +44 (0)115 964 3700
Fax +44 (0)115 986 0538
Sales tel +44 (0)115 964 3800
Sales fax +44 (0)115 986 0071

Email: enquiry@furse.com
www.furse.com

EUROPEAN HEADQUARTERS

Thomas & Betts
200 Chaussée de Waterloo
B-1640 Rhode-St-Genèse
Belgium

Tel +32 (0)2 359 8200
Fax +32 (0)2 359 8201

www.tnb-europe.com

MIDDLE EAST OFFICE

Thomas & Betts Ltd. Br.
Office 107 5EA East Wing
Dubai Airport Free Zone
PO Box 54567
Dubai
United Arab Emirates

Tel +971 (0)4 609 1635
Fax +971 (0)4 609 1636

Email: furseenquiry@tnb.com

SOUTH EAST ASIA OFFICE

Thomas & Betts
Asia (Singapore) Pte Ltd
10 Ang Mo Kio Street 65
#06-07 Techpoint
Singapore 569059

Tel +65 6720 8828
Fax +65 6720 8780

Email: asia.inquiry@tnb.com

The content of this Thomas & Betts publication has been carefully checked for accuracy at the time of print. However, Thomas & Betts doesn't give any warranty of any kind, express or implied, in this respect and shall not be liable for any loss or damage that may result from any use or as a consequence of any inaccuracies in or any omissions from the information which it may contain. E&OE.

Copyright Thomas & Betts Corp. 2010. Copyright in these pages is owned by Thomas & Betts except where otherwise indicated. No part of this publication may be reproduced, copied or transmitted in any form or by any means, without our prior written permission. Images, trade marks, brands, designs and technology are also protected by other intellectual property rights and may not be reproduced or appropriated in any manner without written permission of their respective owners. Thomas & Betts reserves the right to change and improve any product specifications or other mentions in the publication at its own discretion and at any time. These conditions of use are governed by the laws of the Netherlands and the courts of Amsterdam shall have exclusive jurisdiction in any dispute.

Thomas & Betts